


Mirror Door Systems Ltd

Unit 6, Capitol Industrial Centre, Fulmar Way, Wickford, Essex SS11 8YW, UK
 Telephone: +44 (0) 1268 573357 · Facsimile: +44 (0) 1268 573358
 www.mirrordoor.co.uk · Email: salesmds@mirrordoor.co.uk

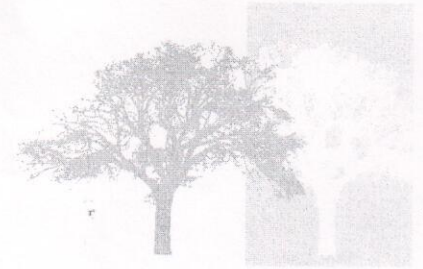

PEARL HINGED DOOR

TOOLS

- POZI SCREWDRIVER
- 2mm ALAN KEY
- 45° MITRE BLOCK
- TAPE MEASURE
- ALUMINIUM CUTTING SAW

MAKE CALCULATIONS
 $200 - 20 = 180$

CUT MIRROR OR GLASS-PANEL INFILL

MITRE CUT CORNERS AT 45°

DOOR BOTTOM

POZI SCREWDRIVER

2mm ALLEN KEY

FACE FRONT DOWN

Insert infill & install glazing gasket

Mid Rail (Option)

GASKET PROFILE

95° Hinge Position to Suit

TOP

(Left or Right Side)

The number of hinges required is dependant on door height, width and weight.

Door widths up to 600mm → 5

Door heights up to 2400

- up to 2000 → 4
- up to 1600 → 3
- up to 900 → 2

Position base to cabinet approx 40/42mm centre from front edge.

Position onto base and adjust to suit and secure.

* Door Handle Knob

A	W - 46
B	P - 54
O	Opening width
P	Opening height

* Handles (not supplied)
 Recommend pre-drill prior to door positioning